
**Orange tape used to show contrast. Match your cable diameter to the correct size Pulling Grip.

1. Prepare end of cable by cutting cable straight - removing any obstructions.

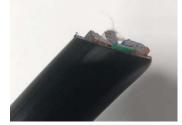

2. Taper edge of cable jacket.



3. Wrap single tape wrap.



4. Slide Grip onto Cable Completely



5. Begin wrapping tape onto cable 4 inches below the mesh.



6. Continue wrapping an additional 4 inches of tape onto the mesh, pulling tightly until the mesh pattern is visable.



7. Connect Pulling Loop to pulling tape or string. See Figure A. on page #1 for reference